

## **FITGO REPAIR**

### **REQUIREMENTS**

1. FitGo wire
2. FitGo dial
3. Flat-head screwdriver
4. Wire cutters
5. Needle-nose pliers

### **REPAIR STEPS**

1. Use a flat-head screwdriver to loosen the FitGo dial from its attachment mechanism on the tongue. To do this, place the screwdriver in the middle of the top of the dial. Then, with a slight prying motion, the dial can be unclipped.
2. Remove the old wire from the shoes and the dial. Then, thread the new wire through the guides of the shoe, ensuring approximately 15 cm of wire remains on both sides.
3. Align the dial by placing the arrows on top of each other (see image 1).
4. Then, thread the wire in a straight line at the bottom of the dial through both guides (see image 2).
5. Make a figure-eight knot in both ends of the wire (see image 3), leaving approximately 3 mm of excess wire at the end of the knot.
6. Pull both sides of the wire so that the ends are placed into the spool.
7. Then, click the dial back onto the attachment mechanism. Your FitGo fastening is now fully functional again, just as you are used to.



Image 1

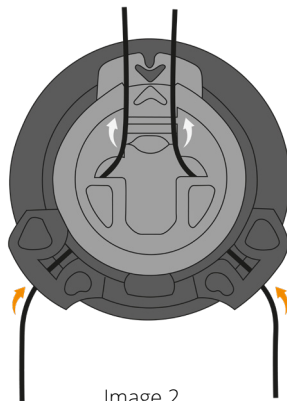


Image 2

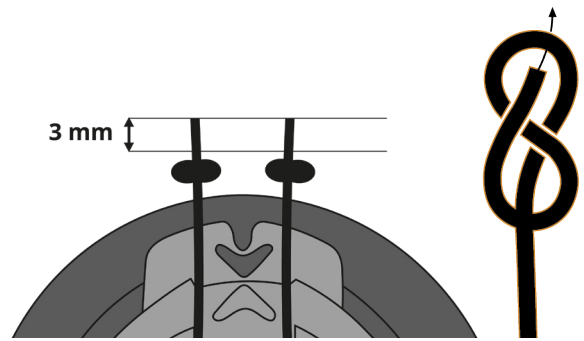


Image 3